 




 **SCOTT®**

SDM25

**FM RADIO with MP3/CD PLAYER AND
USB PORT**

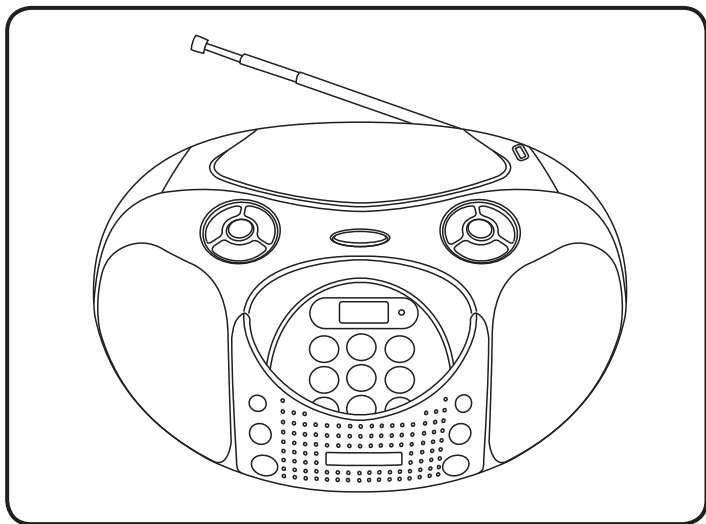

INSTRUCTION MANUAL



WARNING

CLASS 1 LASER PRODUCT

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

CAUTION
INVISIBLE LASER RADIATION
WHEN OPEN AND INTERLOCKS
DEFEATED.
AVOID EXPOSURE TO BEAM



This product contains a low power laser device.

Warning: Do not touch the lens.
DO NOT THROW BATTERIES IN FIRE !

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- Place the unit on a flat and even surface.
- Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- When you are not going to use the unit for a long period of time, disconnect the AC power cord.

ON AC VOLTAGE

- Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Take attention to the environmental aspects of battery disposal.
- Use the apparatus only in moderate climates (not in tropical climates).
- Do not expose the apparatus to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the mains plug of the apparatus shall be disconnected from the mains socket outlet completely.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION : To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

 


The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.

THE MARKING PLATE IS LOCATED AT THE BOTTOM OF ENCLOSURE OF THE APPARATUS.

LOCATION OF CONTROLS

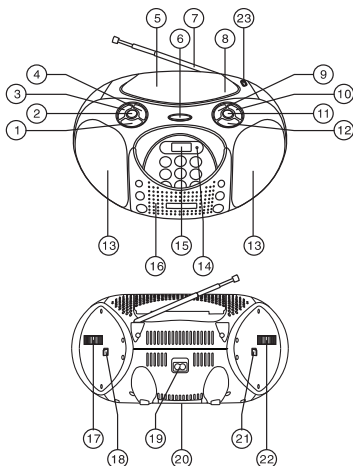


1. PLAY MODE BUTTON
2. PROG./CLOCK-ADJ. BUTTON
3. FOLDER DOWN BUTTON
4. FOLDER UP BUTTON
5. CD DOOR
6. STANDBY BUTTON
7. TELESCOPIC ANTENNA
8. CD OPEN/CLOSE BUTTON
9. BACK BUTTON
10. NEXT BUTTON
11. PLAY / PAUSE BUTTON
12. STOP /CLEAR/CD/USB BUTTON
13. SPEAKERS
14. FM STEREO INDICATOR
15. LCD DISPLAY
16. CARRYING HANDLE
17. TUNING CONTROL
18. MODE SWITCH
19. AC SOCKET
20. BATTERY COMPARTMENT
21. FUNCTION SWITCH
22. VOLUME CONTROL
23. USB PORT

POWER SUPPLY

USING THE MAINS SUPPLY

 
Before use, check that the rated voltage of your unit matches your local voltage.

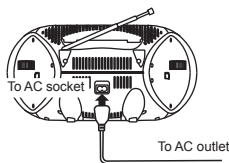

USING BATTERIES


Disconnect the AC power cord from the AC inlet of the unit.

 When the unit is plugged into the mains supply, the battery power is cut automatically

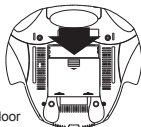

battery compartment door

 When the volume decreases, or the sound becomes distorted, replace all of the batteries with new ones.

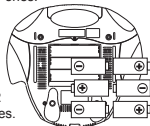

Insert six UM-2 (size C) batteries.

ADJUSTING THE SOUND

Turn the **VOLUME** button to adjust the volume level.



AUDIO CONTROL

1. Press the standby button to switch the power on/off.
2. Press the STOP / CLEAR / CD / USB button repeatedly to select CD or → USB mode.



 
 
STOP / CLEAR /
CD/USB

CLOCK ADJUSTMENT

The clock is displayed on the LCD display in standby mode.

1. Press the PROGRAM / CLOCK-ADJ. button,
2. Press the ►► or ◀◀ button to select 12 hour or 24 hour display.
3. Press the PROGRAM / CLOCK-ADJ. button, The hour digit will flash.
4. Press the ►► or ◀◀ button to adjust the hour digit.
5. Press the PROGRAM / CLOCK-ADJ. button again, The minute digit will flash.
6. Press the ►► or ◀◀ button to adjust the minute digit.
7. Press the PROGRAM / CLOCK-ADJ. button again, The correct time is shown on the display.

PROGRAM/CLOCK-ADJ.



LCD display

LISTENING TO THE RADIO

1. Press the STANDBY button to turn on the unit.



2. Set the function switch to RADIO.

FUNCTION



RADIO

3. Select the FM ST. (FM stereo) or FM MONO mode.

MODE

 


FM ST. FM MONO

4. Tune to the desired radio station by using the TUNING knob. The frequency is displayed.



TUNING



5. Adjust the volume level using the VOLUME button.

VOLUME



Extend the antenna and adjust the angle to get a better reception.

FM




- NOTE :
1. The FM stereo LED indicator lights if the unit receives an FM stereo broadcast and the MODE switch is set to "FM STEREO".
 2. When too much noise is heard during FM STEREO reception, set the MODE switch to FM MONO.

AFTER LISTENING

Press the STANDBY button to switch the unit off.

COMPACT DISC PLAYBACK

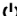1. Press the **STANDBY**  button to turn on the unit.




2. Set the function button to the USB/CD position.

FUNCTION

 


USB/CD

3. Press the  **STOP / CLEAR / CD / USB** button repeatedly to select CD mode.




4. Open the disc holder by pushing the CD door open button.




5. Insert a disc with the label side facing up.




7. Press the **PLAY/PAUSE**  button.
Track number "01", "CD" and the symbol "▶" will be shown during normal CD playback.
Track number "001", "CD", the symbol "▶" and "MP3" will be shown during MP3 playback.
Track number "001", "CD", the symbol "▶" and "WMA" will be shown during WMA playback.
Track number "001", "CD", the symbol "▶" and "USB" will be shown during USB playback

 
CD display




MP3 display

 


WMA display

 


USB display

 


TO INTERRUPT PLAYBACK

Press the Play/Pause  button and the "▶" symbol will flash. Press the button again to resume playback.

 CD display




MP3 display

 


WMA display



 USB display



TO STOP PLAYBACK

Press the **STOP**  / **CLEAR / CD / USB** button and the display shows the total number of tracks on the disc.



TO SKIP TO THE BEGINNING OF A TRACK

- Press either one of the **◀◀** / **▶▶** skip buttons according to the desired skip direction.
- Play/back resumes from the selected track.
- During play, press the **◀◀** button once to return to the start of the current track. Press the **◀◀** button twice to return to the previous track.
- During play, press the **▶▶** button once to play the next track.



SEARCHING FOR A PASSAGE WITHIN A TRACK

- Hold down the **◀◀** or **▶▶** button during playback, and release the button as soon as you recognise the desired passage. Then normal CD playback will resume from this point.

REPEAT AND MIX PLAYBACK

Press the **PLAY MODE** button during stop mode to select a play mode. The following play modes are available: single track repeat, folder repeat (except for audio CDs), all tracks repeat or random playback.



FOR NORMAL CD PLAYBACK

The different play modes available are displayed in the following sequence: "REPEAT" flashes (repeat one track) >> "REPEAT" (repeat all tracks) >> "MIX" (random play) >> "CLEAR" (normal play).

 
During Repeat 1 mode, the display shows:



During Repeat 2 mode, the display shows:



During Mix mode, the display shows:



FOR PLAYBACK OF MP3/WMA FILES AND FILES ON A/USB DEVICE

The different play modes available are displayed in the following sequence: REPEAT flashes (repeat a file) >> "REPEAT FOLDER" flashes (repeat a folder) >> REPEAT (repeat all files) >> "MIX" (random play) >> "CLEAR".

During Repeat 1 mode, the display shows:



 
During Repeat 2 mode, the display shows:



During Repeat 3 mode, the display shows:



During Mix mode, the display shows:



Note on CD-R/RW discs

- Because of the definition/production of non-standardized CD-R/RW formats, playback quality and performance are not guaranteed.
- The manufacturer is not responsible for the playability of CD-R/RW due to recording conditions, such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc, as it may cause a malfunction.
- It is recommended to record only audio files on CD-R/RW discs for easy reading

FOLDER UP / DOWN

- Press the **FOLDER UP** or **FOLDER DOWN** button to select the desired folder.
- Press the **◀◀** button or **▶▶** button to select the desired track.
- Press the **PLAY/PAUSE** button to start playing.



PROGRAM PLAYBACK

FOR NORMAL COMPACT DISC PLAYBACK

Programmed playback allows you to play tracks on a disc in the desired order. Up to 20 tracks can be programmed.

1. Press the "PROGRAM/CLOCK-ADJ." button.
2. Press the **◀◀▶▶** skip buttons to select the desired track number.
3. Press the "PROGRAM/CLOCK-ADJ." button again to memorize the track.
4. Repeat steps 2 and 3 until all the desired tracks are programmed.
5. Press the "PLAY/PAUSE" button to start. "PROGRAM" is shown on the CD display.
6. Press the "STOP/CLEAR/CD/USB" button to stop programmed playback.
7. Press "PROGRAM/CLOCK-ADJ." and "PLAY/PAUSE" buttons to resume programmed playback.
8. Turn off the CD player to clear the programmed memory.

CD display



 
FOR MP3/WMA FILES AND FILES ON THE USB DEVICE

Programmed playback enables folders/albums or tracks on a disc to be played in the desired order. Up to 20 folders/albums or tracks can be programmed.

1. In stop mode, press the "PROGRAM/CLOCK-ADJ." button.
2. Press the FOLDER DOWN/FOLDER UP button to select the number of the desired folder. If you would like to program the whole folder, press the PROGRAM/CLOCK-ADJ button. To program other folders, repeat step 2.
3. Press the **◀◀▶▶** skip buttons to select the desired track number.
4. Press the "PROGRAM/CLOCK-ADJ." button again to memorize the track.
5. Repeat steps 2 to 4 until all the desired tracks are programmed.
6. Press the "PLAY/PAUSE" button to start. "PROGRAM" is shown on the CD display.
7. Press the "STOP/CLEAR/CD/USB" button to stop programmed playback.
8. Press the "PROGRAM/CLOCK-ADJ." and "PLAY/PAUSE" buttons to resume programmed playback.
9. Turn off the CD player to clear the programmed memory.

Note : Programming can only be carried out when the player is in stop mode.

MP3/WMA/USB display

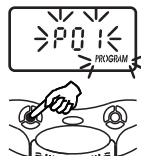

USB OPERATION

1. Connect the USB device or MP3 player to the USB port.
2. Press the STOP/CLEAR/CD/USB button repeatedly to select USB mode.
3. Press the PLAY PAUSE button to start playback.

Note:

 
The USB port is not designed to be connected directly to a computer.

The manufacturer is not responsible for the playability of a USB device or MP3 player due to recording conditions, capacity, interface compatibility, etc.

Due to different formats, some USB devices or MP3 players may take longer to be read.

A USB device can be connected directly to the unit or with a cable no longer than 50 cm.

USB display

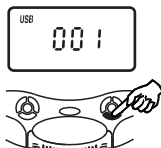

MAINTENANCE

 
CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. After playing, store the disc in its case.



CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

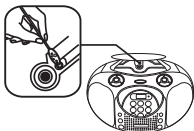

CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

WARNING

Should the CD door be opened before the reading of the CD completed, a jamming noise may occur. This is resolved by closing the CD door.

SPECIFICATIONS

CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x over sampling
Quantization:	1 bit DA converter
Pick up light source:	Semi - conductor laser
Pick up wave length	790 nm

RADIO SECTION

Tuning ranges:	FM 87.5 - 108 MHz
Antennas:	FM Rod antenna

GENERAL

Output power:	1W + 1W (RMS)
Power consumption:	8 W
Speaker:	3" 8 OHM
Power source:	AC : 230V ~ 50Hz DC : 9V (6 x 1.5V LR14/ "C"/UM2)
Dimensions:	299(L) x 272(D) x 153(H)mm
Weight	1.7 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

Where to place the item :

Today's furniture is coated with a wide variety of lacquers and synthetic-coatings that are treated with an extensive range of cleaning products. Therefore, the possibility that some of these substances contain components that react adversely to the rubber feet of the item and soften them, cannot be completely excluded. The rubber feet of the appliance can cause discoloring to furniture surfaces. If necessary, place the appliance on a non-slide surface.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)